

# Charging Cables

Your bundle includes a variety of charging cables to help deliver the best power for every accessory.

## CARE AND CLEANING

To clean, wipe with a damp cloth. If necessary, a mild detergent may be applied to cloth.

## WARNINGS

ACCESSORIES ARE NOT FOR OUTDOOR USE  
DO NOT DISASSEMBLE ACCESSORIES  
DO NOT PENETRATE UNITS WITH FOREIGN OBJECTS  
AVOID STRONG IMPACTS  
DO NOT CRUSH ACCESSORIES  
DO NOT SUBMERGE ACCESSORIES  
DO NOT SPRAY UNITS DIRECTLY WITH ANY LIQUID  
DO NOT INCINERATE ACCESSORIES  
DO NOT MICROWAVE UNITS, PLACE IN HIGH PRESSURE  
CONTAINERS OR INDUCTION HEATING DEVICES  
KEEP AWAY FROM PETS AND CHILDREN

**Failure to comply may cause electrical  
and/or fire hazards resulting in serious injury.**



**BYRNE**  
+hospitality

V0721 P 888.788.0229

320 Byrne Industrial Drive, Rockford, MI 49341

IS07770 ©2021 Byrne Electrical Specialists, Inc. All Rights Reserved

# Vacation Rental Bundle

Guidebook

**BYRNE**  
+hospitality

# A Bundle of (Powerful) Fun!

Guests, family, friends (even you!) are always looking for an easy place to plug in and power up. Your bundle helps do just that. It's everything you need in one box – right down to the charging cables. Simply locate the accessories included inside and read through our tips and tricks to keep your bundle powering like new.

## Hitch

For your first charge, leave the unit connected for 4 hours to ensure a long-lasting battery life (this only applies to the initial charge). Store in a cool, dry place. Ideal storage temps range from -20C to 60C (F to F). If left unused, your **Hitch** should still be charged for 2 hours every two months to prolong the battery life. *Note: When plugging Hitch in, all lights will blink to indicate a secure connection. A single blinking third light may indicate an issue. If the problem isn't resolved, please our contact customer service team.*




A single third light blinking indicates an issue

● ○ ○ ○  
0-24% charged

● ● ○ ○  
25-49% charged

● ● ● ○  
50-74% charged

● ● ● ●  
75-100% charged

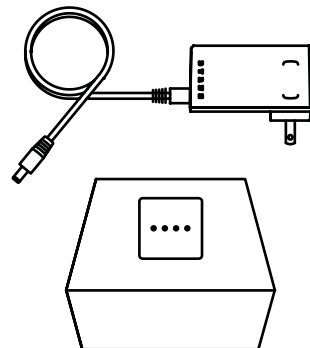

USB-A — 18W Each,  
Quick Charge 3.0


USB-C 18W, PD

## Miki

Underneath your **Miki** is a handy microsuction pad. Just peel off the clear film and press against any smooth, clean surface to lock in place. Need to move? No problem – this pad can be repositioned as many times as you'd like. *Note: If the pad gets dirty, simply wipe with a damp cloth to restore its bonding power.*




USB-A — 2.1 Amps (10W) Each

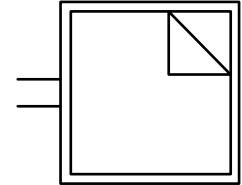


## Apparatus Willow Burelé

Your **Burelé**, **Apparatus**, and **Willow** are all as simple as it gets. No pads. No prongs. Simply place wherever it's needed and plug in.

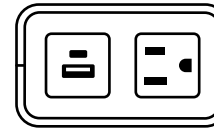


Willow

USB-A+C — 2.1 Amps (10W) Each

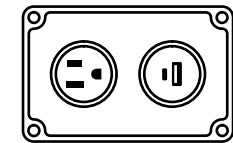

Apparatus

USB-A+C — 2.1 Amps (10W) Each

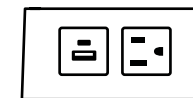

Burelé

USB-A+C — 2.1 Amps (10W) Each